



# ComfoWell CW 520 and CA 550


## Installation sequence

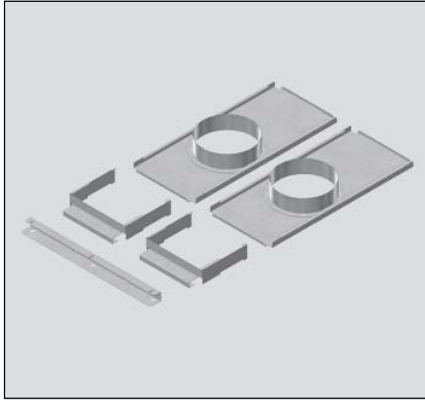

1. CA 550 CW 520 installation set

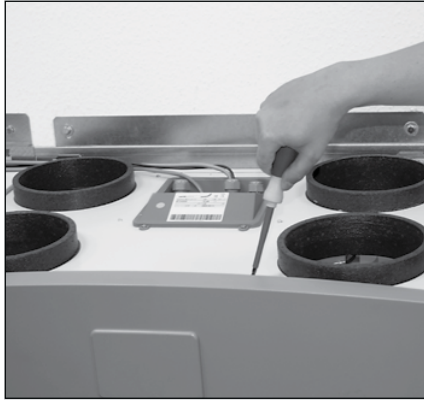


2. Unscrew screws

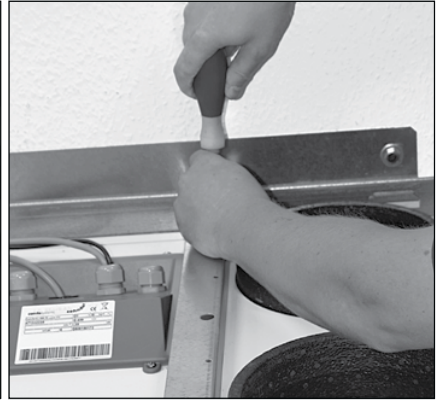

3. Screw U-profile to CA 550



4. Attach the mountings to the U-profile

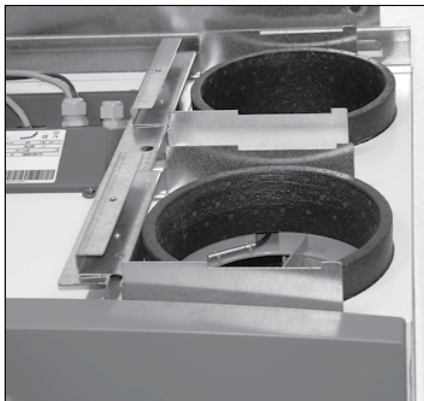

5. OK




6. Mount end piece plate



7. Secure end piece plate with one screw




8. OK

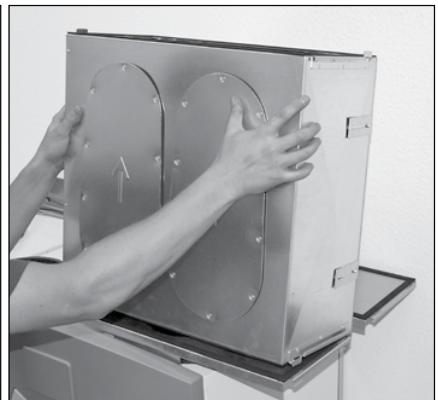


9. Place ComfoWell onto the end plate

# ComfoWell CW 520

## Installation sequence

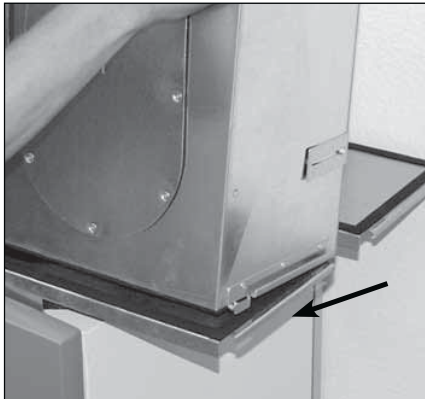

1. Fit ComfoWell together

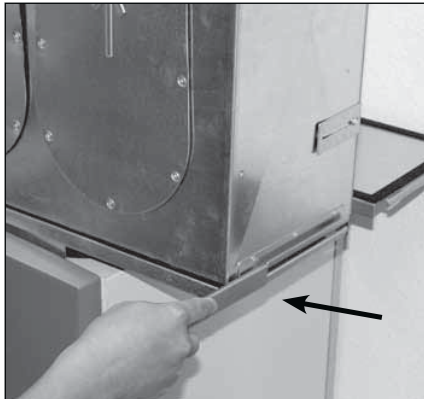


2. Make all connections using the clamping rail




3. OK


## Securing

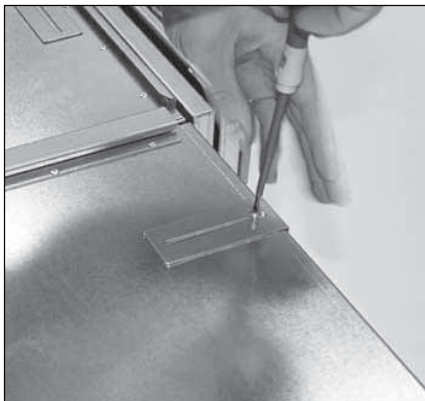

1. Unscrew the mounting brackets

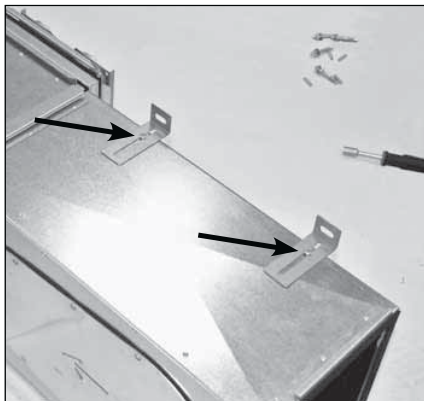


2. Rotate and secure mounting brackets

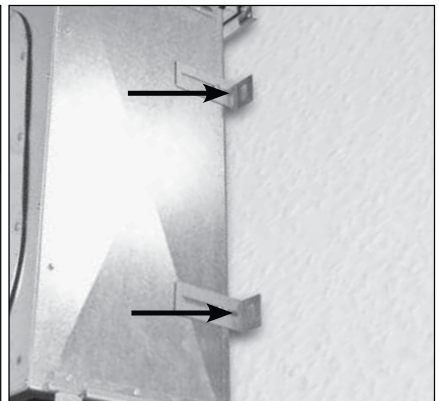


3. Secure the element to the wall


## Joining together

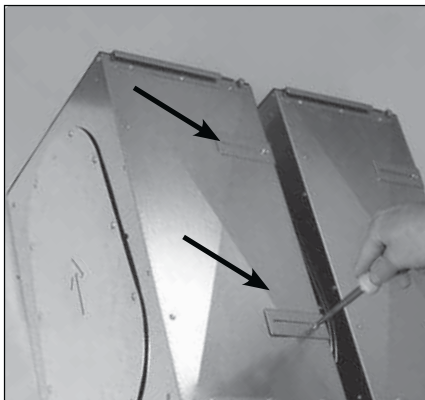

1. Unscrew the mounting brackets

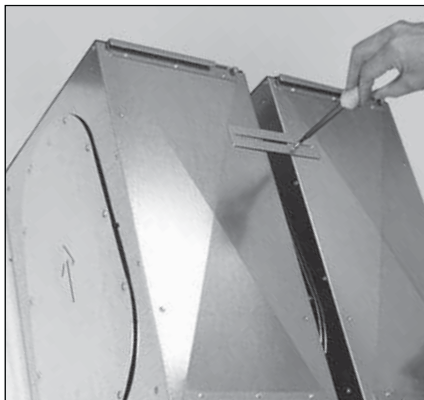


1a. Screw on fastening sheet

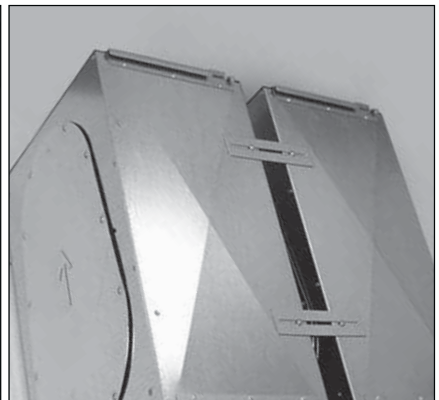


1b. OK

# ComfoWell CW 520

## Installation options

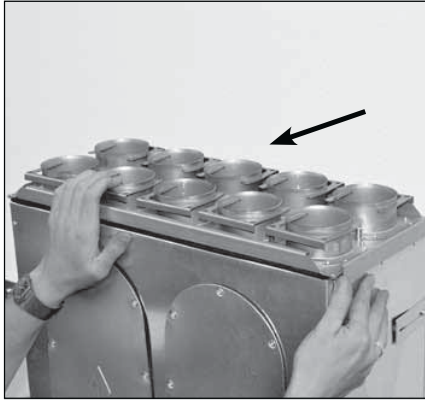


1. Mounting plate

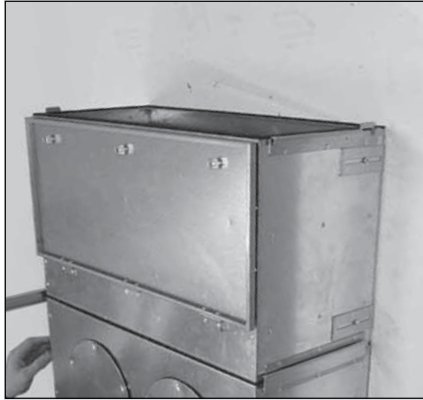


2. Filter housing



3. Wrong  
Do not install with the opening pointing downwards

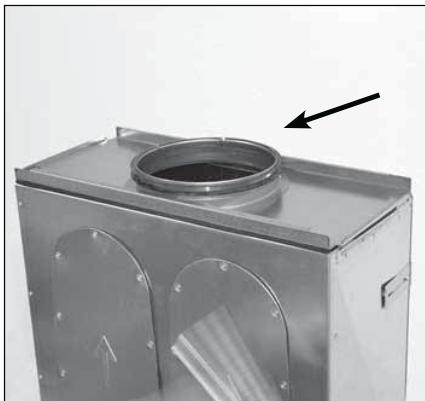

4. End piece

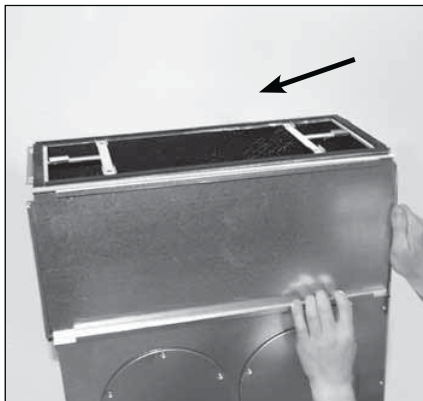

5. Manifold